

MOBILUS MOTOR SP. Z O.O.

ul. Miętowa 37,
61-680 Poznań, PL
tel. +48 61 825 81 11
fax +48 61 825 80 52

www.mobilus.pl



NIP 972-10-78-008
REGON 634538898
KRS 0000188418

kapitał zakładowy 496,000.00PLN
Sąd Rejonowy w Poznaniu XXI
Wydział Gospodarczy KRS


Transmission protocol switching instructions (COSMO, COSMO | 2WAY) for remote controls COSMO | HCT, | HM, | HB, | WT, | WT9, | G3+, | L1, | L5

COSMO | HCT



1. Start the **SETTINGS**  screen.
2. Go to **SETTINGS > OTHER > PROTOCOL SELECTION**.
3. In the **PROTOCOL SELECTION** tab, select the appropriate communication technology:
 - a) **COSMO**,
 - b) **COSMO 2WAY**.
4. Save the changes.  > .

 
How do I check the active communication mode?.

1. Start the **SETTINGS**  screen
2. Go to **SETTINGS > OTHER > PROTOCOL SELECTION**.
3. The current communication protocol is selected in the **PROTOCOL SELECTION** tab [V].

COSMO | L1



COSMO | L5

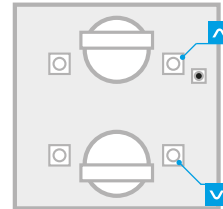


1. Activate the remote control.
2. At the same time, press and hold the UP  + DOWN  buttons on the back of the controller for 20 seconds.
3. When the LEDs are lit, the corresponding communication standard is activated:
 - a) LEDs flashing rapidly - the latest radio communication COSMO | 2WAY;
 - b) LEDs blinking slowly - previous communication COSMO;

COSMO | L1



COSMO | L5

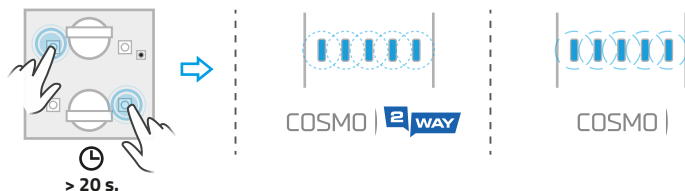 

It is not possible to check the active communication mode.

MOBILUS MOTOR SP. Z O.O.

ul. Miętowa 37,
61-680 Poznań, PL
tel. +48 61 825 81 11
fax +48 61 825 80 52


www.mobilus.pl

NIP 972-10-78-008
REGON 634538898
KRS 0000188418

kapitał zakładowy 496,000.00PLN
Sąd Rejonowy w Poznaniu XXI
Wydział Gospodarczy KRS


COSMO | WT9

COSMO | WT

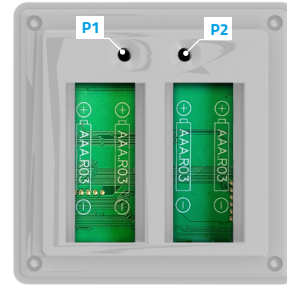 


1. Activate the remote control.
2. Press and hold the P1 + P2 function buttons on the back of the controller for 20 seconds at the same time.
3. When the LEDs at the bottom of the front panel light up, the corresponding communication standard is activated:
 colour red - the latest radio communication COSMO | 2WAY
 blue colour - previous communication COSMO

COSMO | WT9

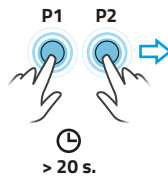 


COSMO | WT

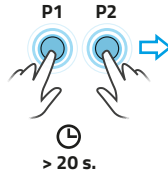 



How do I check the active communication mode?

1. Activate the remote control.
2. Press and hold the STOP button for about 5 seconds.
3. The LEDs in the lower part of the front panel shall light up indicating:
 colour red - the latest radio communication COSMO | 2WAY
 blue colour - previous communication COSMO

COSMO | WT9

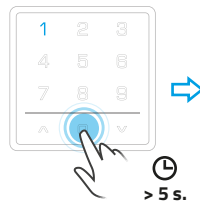 

COSMO | WT

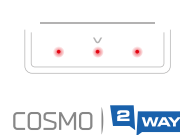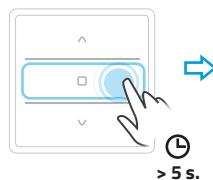  

MOBILUS MOTOR SP. Z O.O.

ul. Miętowa 37,
61-680 Poznań, PL
tel. +48 61 825 81 11
fax +48 61 825 80 52


www.mobilus.pl

NIP 972-10-78-008
REGON 634538898
KRS 0000188418
kapitał zakładowy 496,000.00PLN
Sąd Rejonowy w Poznaniu XXI
Wydział Gospodarczy KRS

COSMO | G3⁺



1. Activate the remote control.
2. At the same time, press the STOP  and RIGHT  buttons for 20 seconds.
3. When LEDs light up, the appropriate communication standard is activated.:
Change the colour of LEDs from blue to red. - the latest radio communication COSMO | 2WAY;
Change the colour of LEDs from red to blue. - previous communication COSMO.

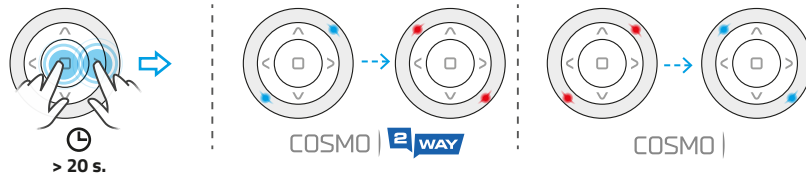 

How do I check the active communication mode?

1. Activate the remote control.
2. Press and hold the STOP button for about 5 seconds.
3. The LEDs on the front panel light up:
colour red - the latest radio communication COSMO | 2WAY
blue colour - previous communication COSMO



MOBILUS MOTOR SP. Z O.O.


ul. Miętowa 37,
61-680 Poznań, PL
tel. +48 61 825 81 11
fax +48 61 825 80 52

www.mobilus.pl


NIP 972-10-78-008
REGON 634538898
KRS 0000188418

kapitał zakładowy 496,000.00PLN
Sąd Rejonowy w Poznaniu XXI
Wydział Gospodarczy KRS

COSMO | HM COSMO | HB

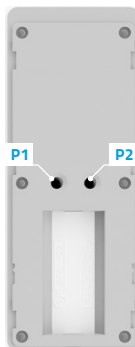 

1. Activate the remote control.
2. Press and hold the P1 + P2 function buttons on the back of the controller for 20 seconds at the same time.
3. When the front panel LEDs light up, the corresponding communication standard is activated:
colour red - the latest radio communication COSMO | 2WAY
blue colour - previous communication COSMO

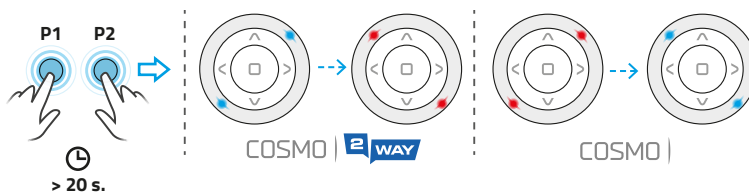 

How do I check the active communication mode?

1. Activate the remote control.
2. Press and hold the STOP button for about 5 seconds.
3. The LEDs on the front panel light up:
colour red - the latest radio communication COSMO | 2WAY
blue colour - previous communication COSMO

